



AZL GP30 TRUCKS

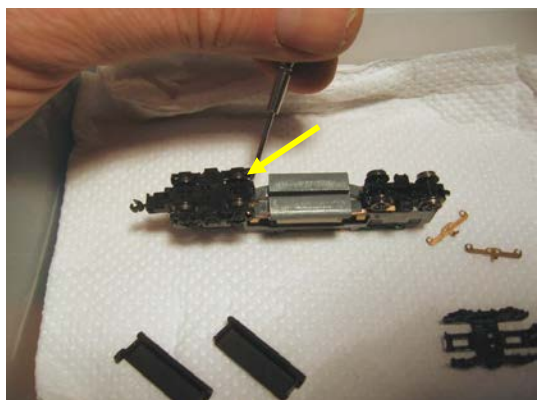

Removing the truck sides.

Pull the bracket of the truck side frame towards the 'tank' to release it.

I left the wheels in place and stored the chassis until needed again. Take care not to loose the pickups.

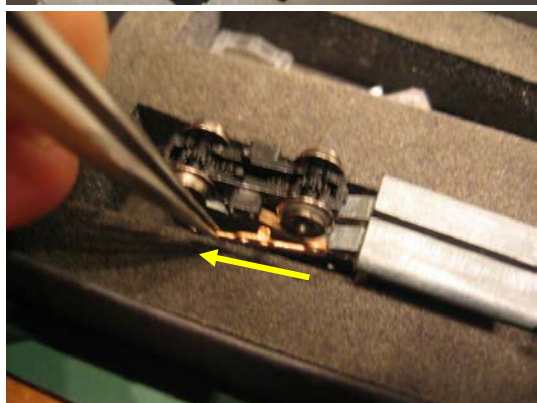

Installing the truck side frames.

Move the pickup to the front to install it. Ensure that the pickup contact between the copper strip and truck. Gently move the pickup in position with your right hand.




Just another viewing angle.




Now repeat this exercise for the other side of the truck.


AZL GP30 TRUCKS

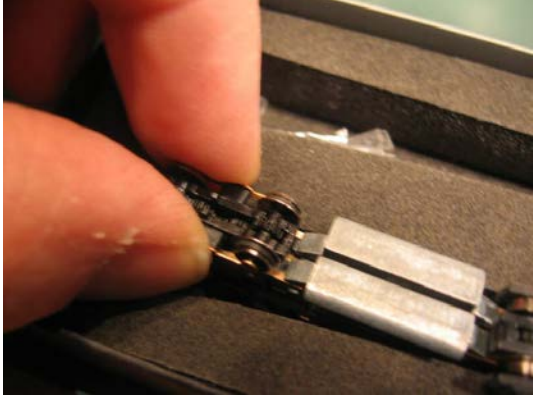


Double check that the pickup contacts are in the right position.

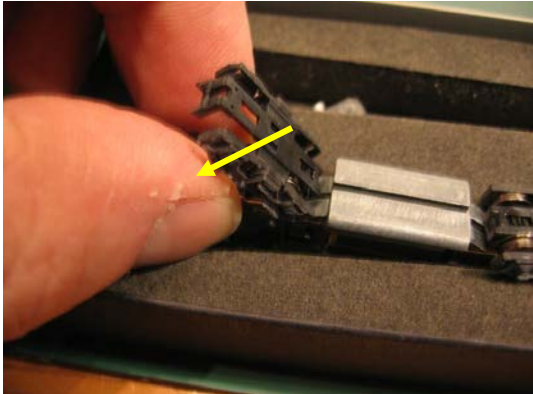

Now slide the truck side frame over the wheels with pickup. Using your right hand while holding the pickups in position with your other hand.

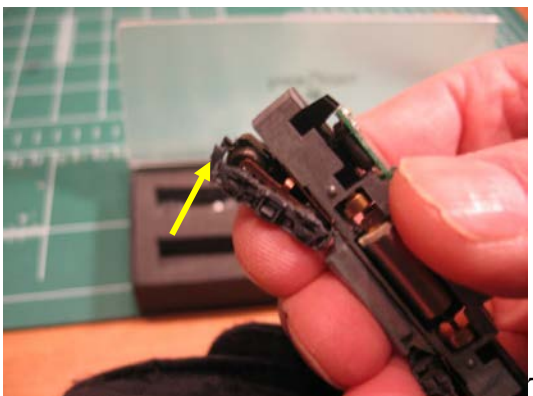

Lock the truck side frame in position with the remaining part of the coupler box.

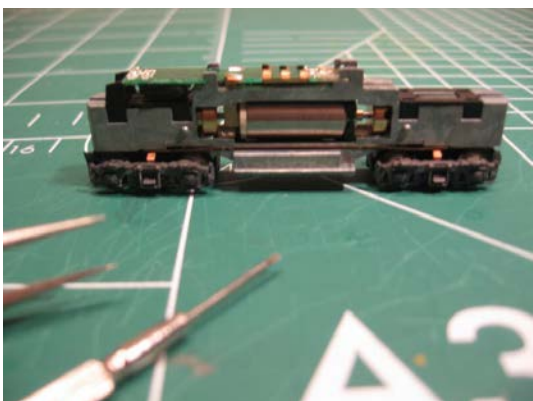

Chassis is ready and operational again.

